

Last updated 2019/10/14 10:33

Resetting the Dome Controller

Procedure to reset the dome controller due to the dome stalling or becoming unresponsive.

1. Locate the dome controller box labeled DOME ROTATION
 - In telescope dome located on North side
2. Turn switch labeled 240V POWER to OFF position
3. Wait for 15 seconds
 - This allows the capacitors to fully drain and clears any faults that were registered
4. Turn switch labeled 240V POWER to ON position

If this does not correct the issue, please contact the appropriate Mountain Operations staff.



From:
<https://lavinia.as.arizona.edu/~tscopewiki/> - MOON

Permanent link:
https://lavinia.as.arizona.edu/~tscopewiki/doku.php?id=public:catalinas:bigelow:kuiper_61:troubleshooting:resetting_dome_controller_for_dome_stalls

Last update: 2019/10/14 10:33

