

Schulman Telescope Startup Procedure

Updated 8/4/2022 - Travis Deyoe

The order of operations below is designed for time efficiency. Missing a step could lead to frustration as some steps may feel “out of order” but are designed to reduce down time waiting for things to power on.

Pre-Startup Checks

Pull Off Tarps

The Telescope, Controller, and desk will always be tarped whenever the telescope is put into Lightning Shutdown. They will need to be removed before inspecting or moving the telescope.

Perform your best interpretive dance to appease the tarp gods. If that does not make the tarp fall off you must remove it manually. Folding it up and placing it to the right of the brown cabinet is a nice touch.

Check Telescope Position

Verify the the telescope is not at any limits. If it is or looks “wrong” to you move it manual into a safe position before the next steps. This guarantees that it will be able to successful and safely home in a future step. It's recommended to place it either at [Zenith](#) or the [Park](#) position.

Check Emergency Stops

If engaged, release any E-stops on the Hand Paddle, Telescope Controller, and the MaxDome Controller. They all appears as big red buttons that scream “PRESS ME IN CASE OF EMERGENCY”.



Check the telescope Balance state

The telescope is in a balanced state when one of the following conditions are met:

- The camera is on with a single weight attached at the “top” of the backplate.
- The focuser is on with both eyepiece weights attached on either side of the focuser and there is no weight on the “top” of the telescope.

In either state an eyepiece should be in the 6” refractor and the mirror covers are open (this will be done later in the [this step](#). If neither of these are the state the telescope is in place it in one of the [Configurations](#) now or at the very least before [homing the telescope](#).

Check RA Encoder Tape

Follow the RA [optical tape](#) along the big RA wheel and check for any smudges, bug guts, and so forth. The WEST [read head](#) is active while the east read head is not currently utilized so make sure through the entire motion of the telescope (in RA of course) that there is nothing blocking the reading of the tape on the west side and that there is nothing obstructing the read heads ability to “see” the optical tape.

Make certain both the [drive and idler bearings](#) are also free of anything that might be transferred to the optical tape. There is a bit of felt held in place there that *should* wipe off anything but its best to check still.


If anything is observed use a microfiber cloth or TEX wipe to wipe it away. 99% isopropyl alcohol may be utilized if necessary. Note that you should only wipe along the narrow length NOT along the circumference of the tape.


Powering everything on

Now that you have inspected the telescope for safety it is now time to start turning things on.

Power On UPS's

First plug in the Big and Small UPS's to the left of the desk. The BIG UPS should be twisted clockwise after insertion in order to secure it in the socket. The Big UPS powers the larger controller box on the wall above it while the Small UPS powers basically everything else.

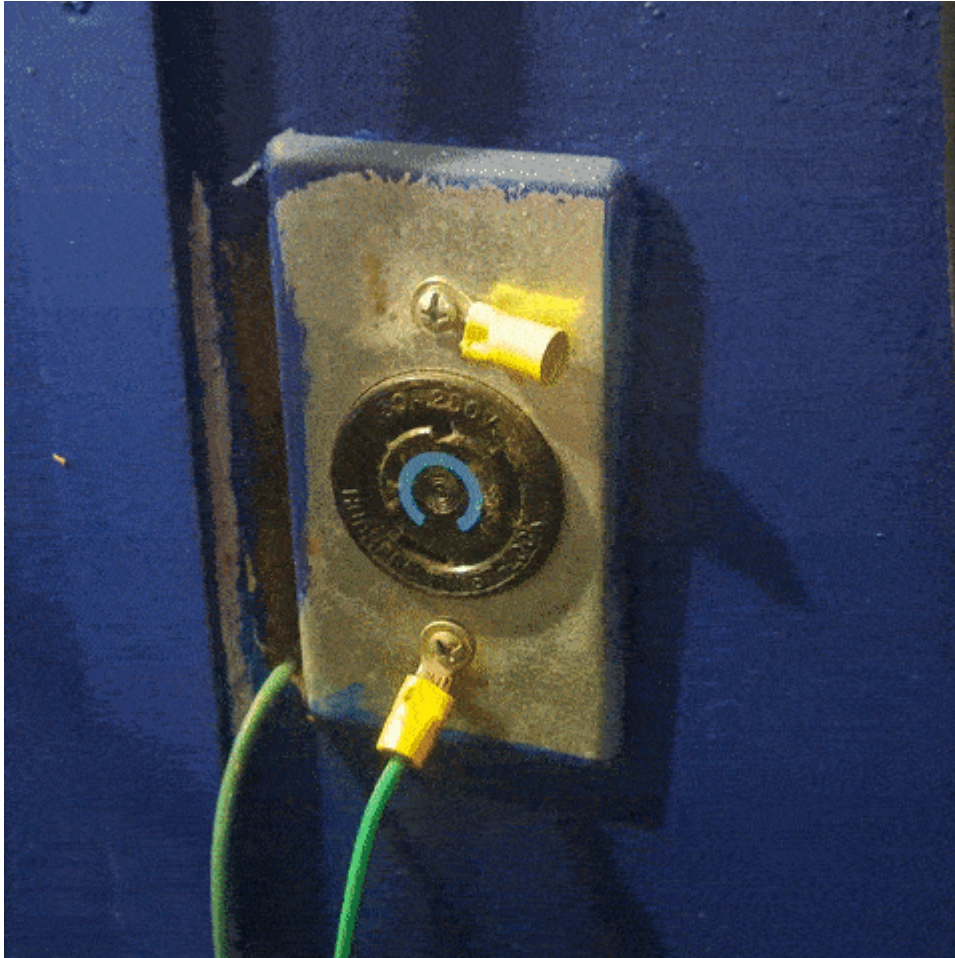

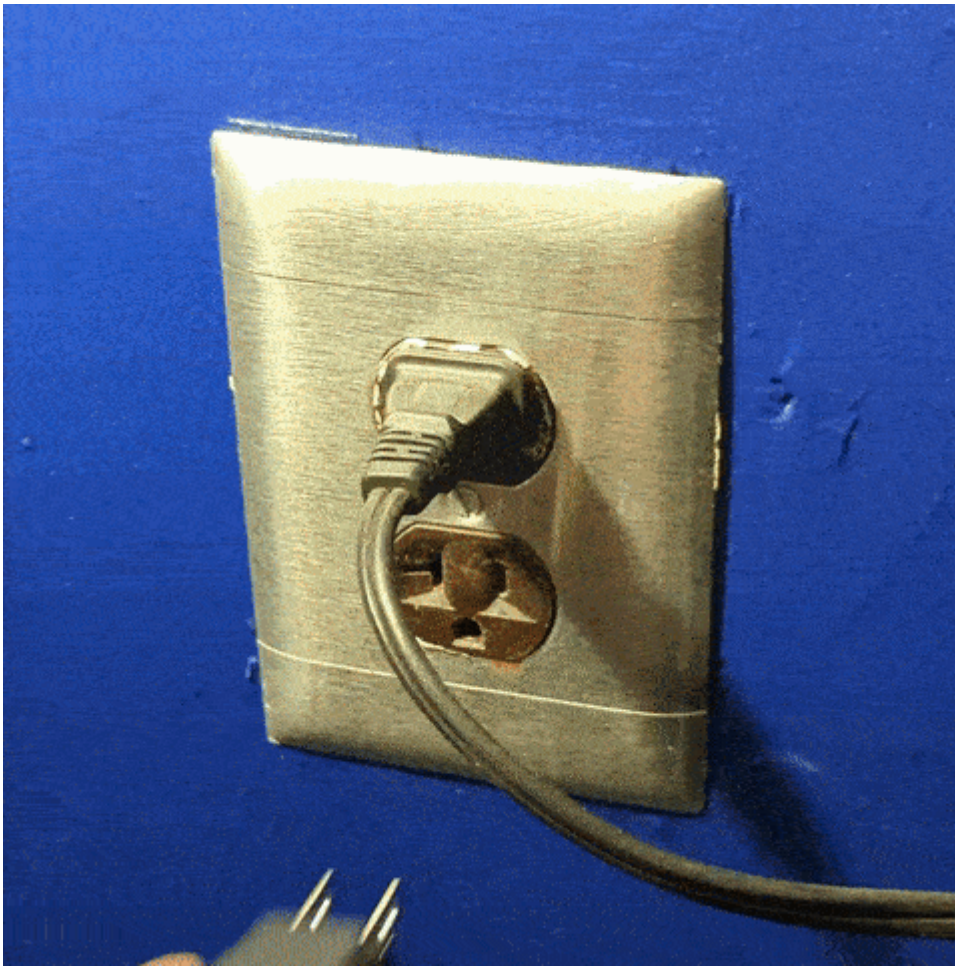

Next you must turn on both UPS's. Press and hold the corresponding “on” button for at least a second until you hear a beep then let go. For the Big UPS this will take a few moments as it cycles through some littles (shown in full in the GIF below). The Small UPS will power on quicker.



Both UPSs will immediately supply power to their output plugs so no further button pressing is

necessary.

Power On Controller and Desktop computer

The big gray box on the wall is the Controller. Turn it on by turning the large red switch on the bottom left of the Controller box to the right (clockwise). Assuming the UPS was powered on in the last step Fans and other noises will be heard as the system comes on.




Now is also when you should turn on the Desktop computer. It is under the desk behind the little door on the left. The power button is the same color as the computer case so in a dimly lit room (like it most likely is now without the dome open) you may need a light to find it.

Power on TIM Unit

The TIM unit is a small gray/black box on back of the telescope just below where the camera or eyepiece is installed. There is a standard power switch on the left side to turn it on.

Check Controller Ethernet Cable

While the Controller and Desktop are powering on (the Controller takes about 15 years to do so) go into the warm room. Now go into the closet. There is a grey ethernet cable labelled “Controller”. Plug this into the switch on the right wall and confirm there are the happy internet lights on the switch.

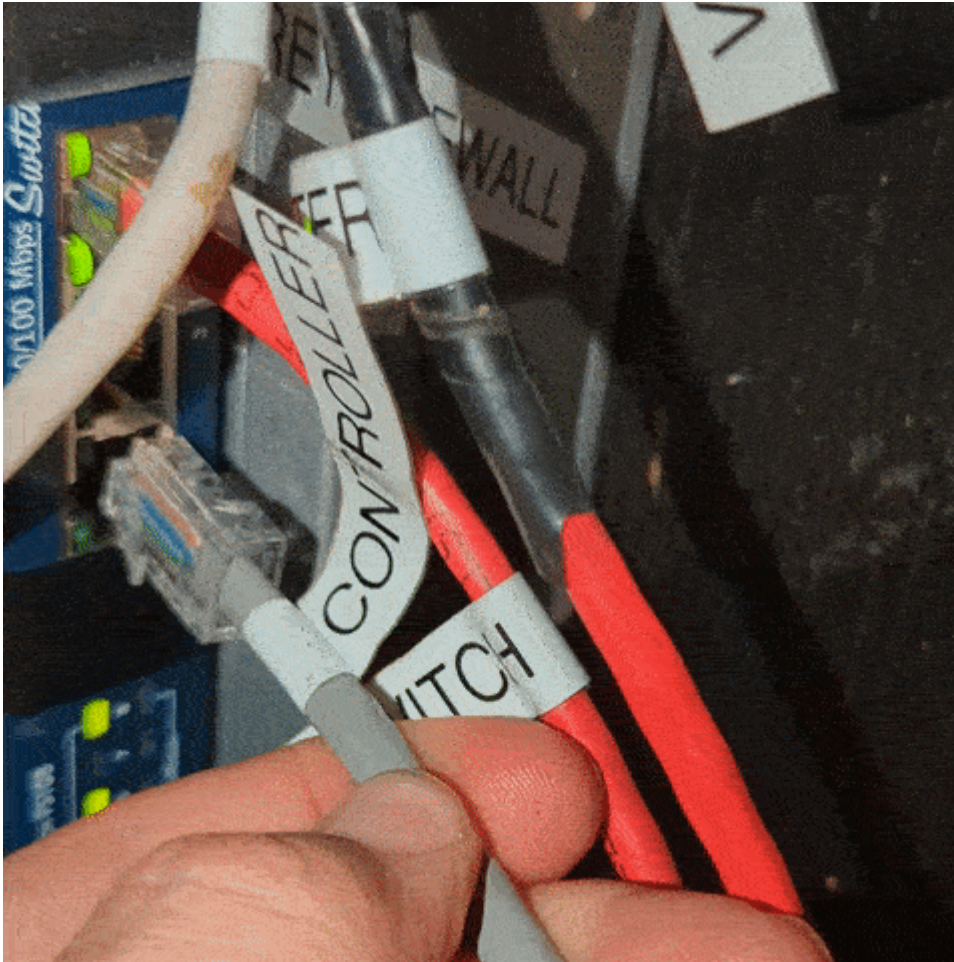

Desktop Tasks

Procced back to the desktop computer which should be fully powered on. Login to the computer (standard SkyCenter password). The next few task will all be done on this computer.

Open Mirror Covers

Open the [RCOS TIM software](#) from the desktop link or toolbar quick link.



Connect to the TIM unit and navigate to the “Primary Mirror Covers” tab.




Open the Mirror Covers:



If the mirror covers aren't opening correctly or the current stays high (over 1000milliamps) then there is a problem. Abort the opening (or closing) and follow [this procedure](#)

Remotely connect to MIC and PubSub

Launch VNC Viewer. It will appear on the middle right of the desktop (or just search it in the start menu). You will now want to remotely connect to the MIC and PubSub computers that run the Controller. This is what VNC Viewer does so just double click on the MIC and SUBSUB links in VNC Viewer and it will open a window of each.

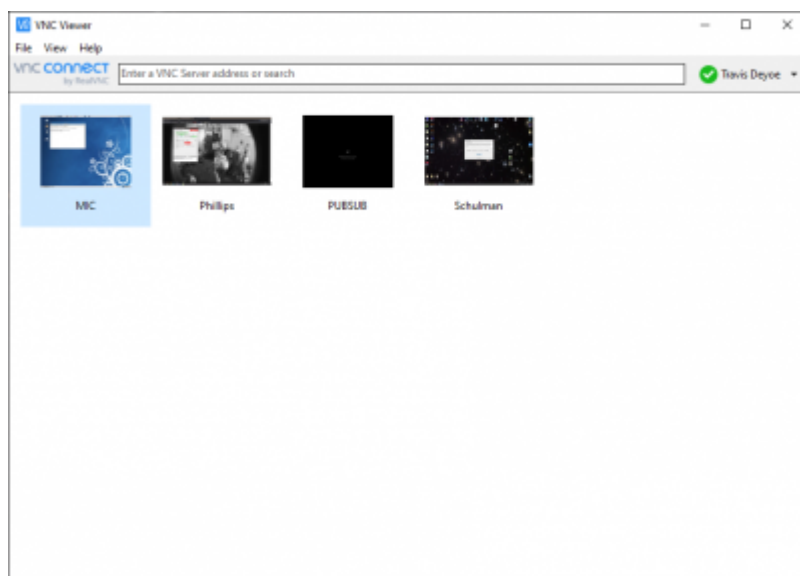

Verify Mic and PubSub time

NOTE: At this time PubSub is dumb and will display a “Logout” screen. Click that button

Launch Pubsub software

Applications Places System      

The screenshot shows a VNC Viewer window titled 'V2 pubsub.tus:1 (eng) - VNC Viewer'. The desktop background is black. On the left side, there are four icons: a computer monitor labeled 'pubsub.tus', a folder labeled 'eng's Home', a trash can labeled 'Trash', and a document labeled 'runPubsub'. In the center of the desktop, there is a window titled 'rma@tus - JADE Remote Agent Management GUI'. This window has a menu bar with 'File', 'Actions', 'Tools', 'Remote Platforms', and 'Help'. Below the menu bar is a toolbar with various icons. The main area of the window is divided into two panes. The left pane shows a tree view of 'AgentPlatforms' with the following structure:

- AgentPlatforms
 - tus
 - Main-Container
 - Observatory_doma_tus
 - JTCS_0m8a_doma_tus
 - Site_tus
 - Instruments-xx01_0m8a_doma
 - xx01_0m8a_doma_tus@tus
 - RPC_Gateway

The right pane contains a table with the following columns: 'name', 'addresses', 'state', and 'owner'. The table has a header row with these column names and a body row with the same column names in all caps: 'NAME', 'ADDRESSES', 'STATE', and 'OWNER'. The table is currently empty of data rows.

Printed on 2025/07/09 19:07

Once the “Instruments-xx01_0m8a_doma” process is loaded under its section PubSub is ready to communicate with the telescope (and the user). The “RPC_Gateway” process will not show up until communication to PubSub through the web browser commences. This is in the next step. It is OK to close the VNC window.


From Pubsubs Desktop folder double click on the “Clear and Restart Pubsub” program. This will open both a Terminal window and a GUI. The gui will slowly populate with a list of items. **Do not process until all those below show up**

- Main-Container
- Observatory_doma_tus
- Site_tus
- jTCS_0m8a_doma_tus
- Instruments-xx01_0m8a_doma
- (RPC_Gateway) ← only shows once connected (via [this step](#)) to the controller, will not show initially

Access the LCOGT (PubSub) GUI

Now that the system is up and running with drives, servos, and PubSub- access the LCOGT GUI:

1. Open the [Chrome Browser](#) and click the quick link labeled PubSub (leftmost icon). You will be presented with the screen below:

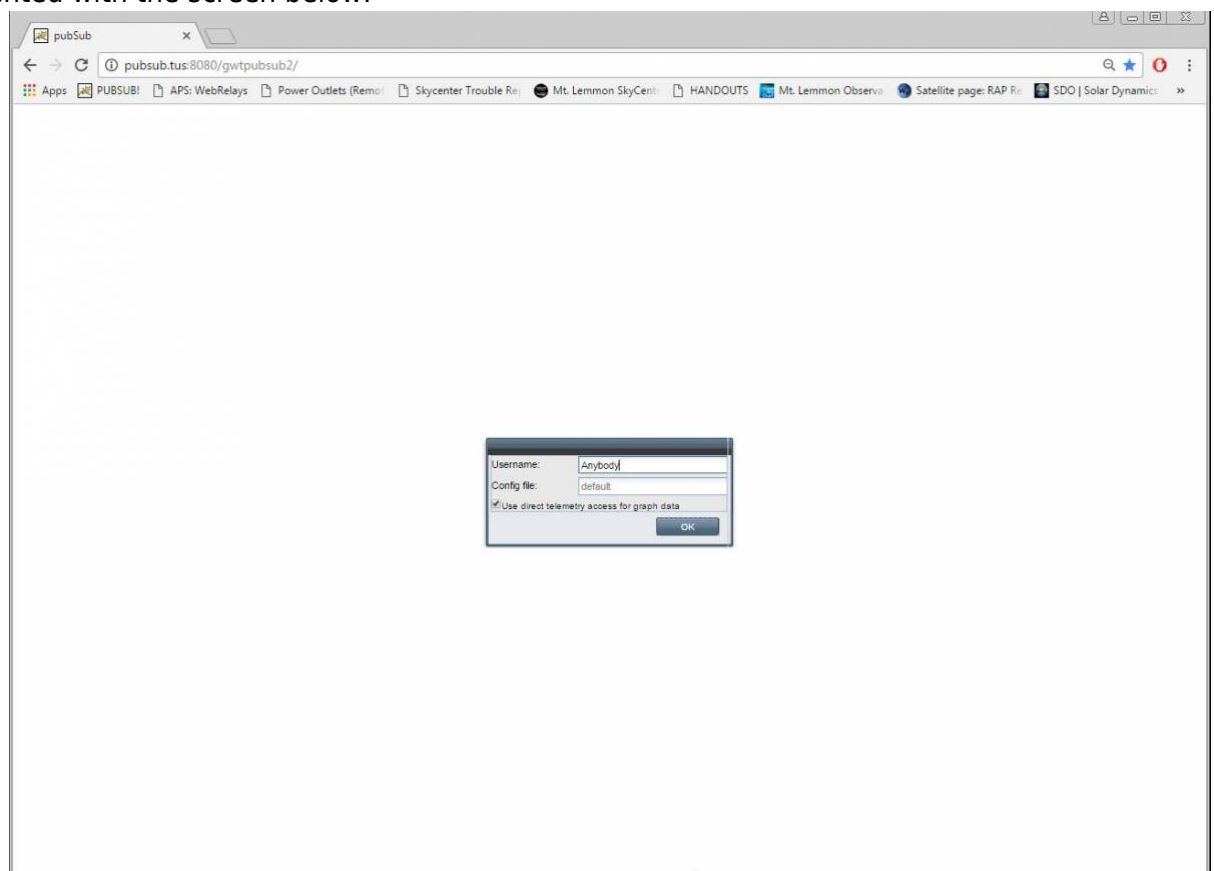

1. The log on name is unimportant. However *default* is required for the Config File field.
3. Press the “OK” button to continue.
2. Wait for PubSub to send all of the data to the browser. It will take 2-4 minutes. If you simply have a blank/white screen → going back to PubSub through VNC may be necessary to make certain it is setup correctly.


3. Once the GUI comes up you will be presented with the Site heads up information. Note the small tab is labeled “tus.” This stands for “Tucson.” None of the capabilities on this screen are currently in use.

1.


The screenshot shows a web browser window with the URL `pubsub.tus:8080/gwtpubsub2/`. The page title is "tus". The browser's address bar shows the URL. The page has a top navigation bar with tabs: "tus", "dome", "Weather", "Site", "Boltwood", "Thresholds", "Activity", "Config", "Harvest", "Reduction", "Services", and "Power". The "tus" tab is selected. The page content is divided into several sections:

- Agent State:** Weather is "Okay" (green bar).
- Weather Control:** Cloud, Sun, and Countdown to Open are all "Enabled".
- Limits One:** Ok To Open is "False", Countdown To Open is "0 sec", Interlock Reason is "Sun Up", and Threshold Class is "Sun Up".
- Limits Two:** Ok To Open is "False", Countdown To Open is "0 sec", Interlock Reason is "Sun Up", and Threshold Class is "Sun Up".
- Limits Three:** Ok To Open is "False", Countdown To Open is "0 sec", Interlock Reason is "Sun Up", and Threshold Class is "Sun Up".
- All Sky Camera:** no allsky camera available.
- Overrides:** Cloud Override and Sun Override are both "False".
- Values:** A list of sensor readings including Air Temp (0.0 °C), Barometric Pressure (0.0 mbar), Dew Point (0.0 °C), Electric Field (0 V/m), Humidity (0 %), Weather Leaf Sensor Voltage (0 mV), SQM Sky Brightness (0.00 mag/arcsec²), Solar Insolation (0 W/m²), Wind Direction (0 deg), Wind Direction Avg (0 deg), Wind Speed (0.00 m/s), Wind Peak 12 seconds (0.00 m/s), Wind Peak 10 minutes (0.00 m/s), Weather Rain Alert (Clear), Particulates (1 micron) (0 parts/m³), Boltwood Transparency Average (NaN %), and Boltwood Sky Minus Ambient Av (NaN °C).
- Infrastructure:** Sens Version, Panel Temp (0 °C), Battery Voltage (0 V), Last Reading, Watchdog Errors (0), Weather System Type (DUMMY), and Weather System Url.
- Moon:** Topocentric Right Ascension (16:11:02.796 h), Topocentric Declination (-16:40:53.857 deg), Zenith Distance (61.29 deg), Azimuth (222.61 deg), Angular Diameter (0.49 deg), and Illumination Fraction (0.044).
- Sun:** Topocentric Right Ascension (14:30:14.616 h), Topocentric Declination (-14:48:12.161 deg), Zenith Distance (76.89 deg), Azimuth (242.68 deg), Angular Diameter (0.54 deg), Morning Astronomical Twilight (12:17:44.904 h), Morning Civil Twilight (13:15:31.680 h), Sunrise (13:40:55.524 h), Sunset (00:33:00.972 h), Evening Civil Twilight (00:58:21.720 h), and Evening Astronomical Twilight (01:56:04.272 h).
- Failures:** A list of sensor states including Battery State, Electric Field Sensor State, Humidity Sensor State, Leaf Sensor State, Particulate Sensor State, Pressure Sensor State, Rain Sensor State, Sky Brightness Sensor State, and Solar Sensor State.
- Sky:** Illumination (18150.0541 lux) and Brightness Ratio (9075027.07).

4. Click on the tab beneath “tus” to expose the information under the “dome” tab. The LCOGT software can be used to control multiple telescopes at a site. Our single site has a single telescope in the “A” dome which is roughly “dome.” Again this functionality is not being used.

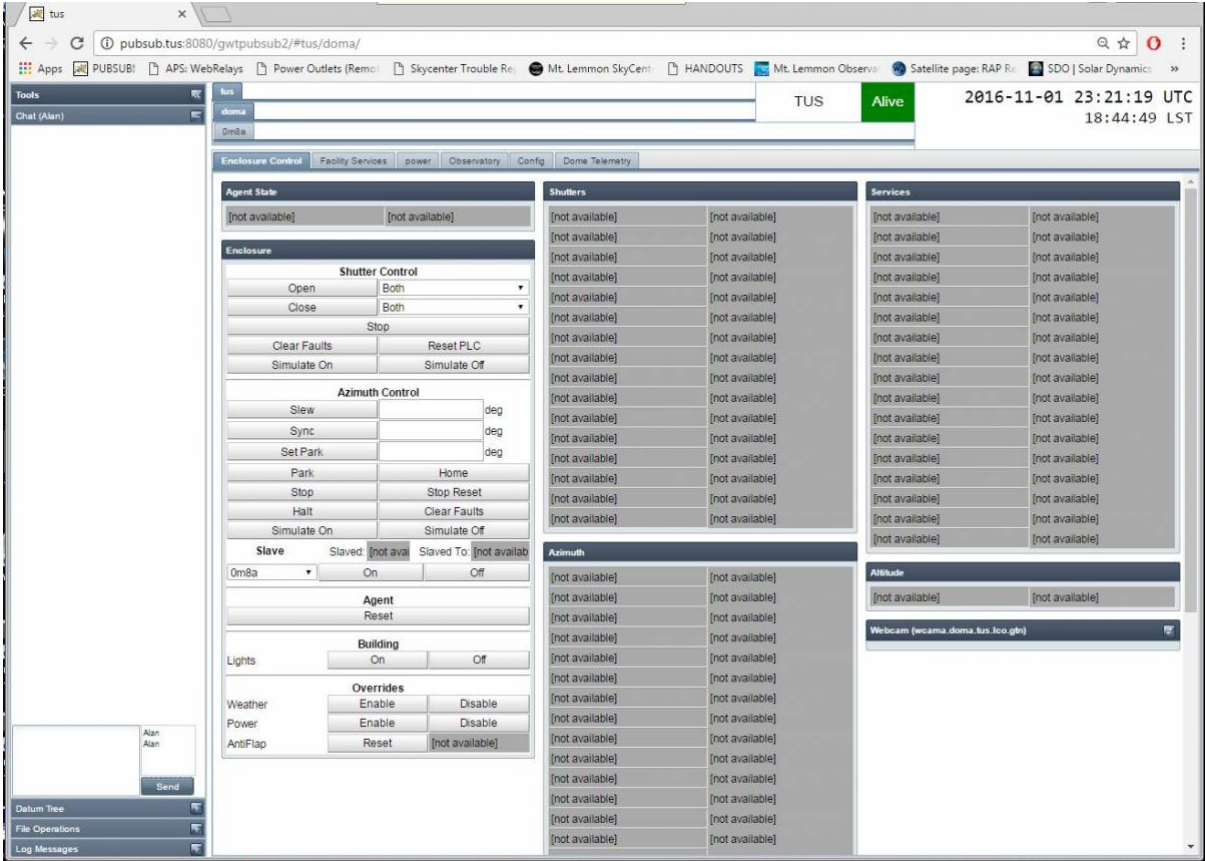

5. Finally click on the “0m8a” tab to expose the controls for the Schulman Telescope. This tab roughly translates to 0.8m a (or first 0.8m telescope).

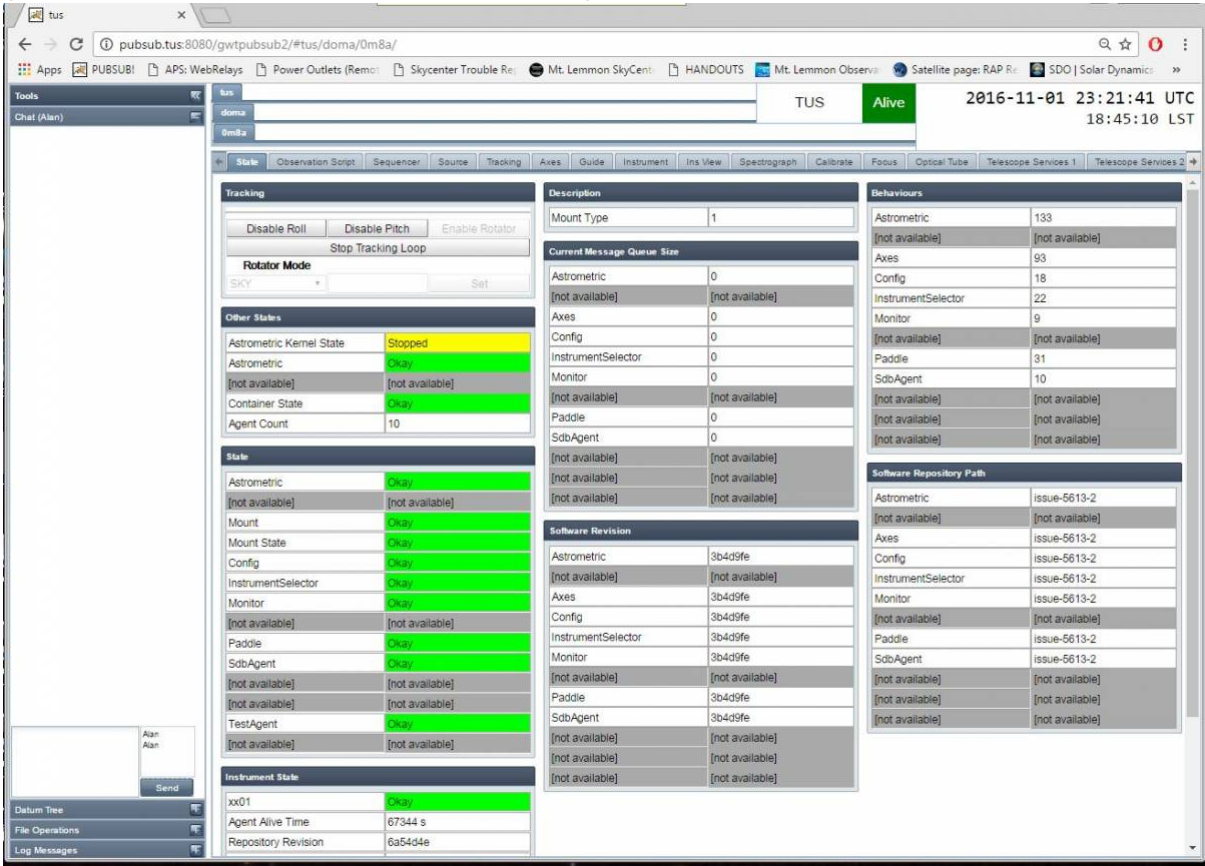

6. Take note of the color of the fields in the column on the left in the above image. They should all be green when the telescope is ready to be used. The “astrometric kernal” can be “yellow” when the drives are not tracking. If the telescope is tracking, this will also be green. If you come to this tab/screen quickly after rebooting PubSub, you may see fields such as “Mount State”

indicate “initializing.” This is OK provided that the agent does eventually initialize the drives and the field goes to green after a minute or two.

Homing the Schulman Telescope

The telescope must be homed before it can be operated.

1. Go to the Axes tab. Note that the axes are **Unhomed**.

The screenshot shows the 'Axes' tab of the telescope control software. The 'Agent State' section displays 'Mount' with a green 'Okay' status. The 'Axes Command' section is divided into three columns: 'Roll', 'Pitch', and 'Rotator'. Each column has a 'Standby' button and a position/velocity selector. The 'Roll' and 'Pitch' axes are currently in 'Unhomed' state. Below these are various control buttons for each axis, including 'Slew', 'Halt', 'Home', 'Park', 'Unwrap', 'Stop', 'Stop Reset', 'Enable', 'Disable', 'Goto Pos L1', 'Goto Neg L1', 'Recover L2', and 'Fault Reset'. The 'Rotator' column has a 'Off' status and similar control buttons.

1.

2. Press the large *HOME* button (circled below) to move both axes simultaneously to the home position. See [Telescope Orientation](#) for the correct position.

The screenshot shows the Telescope Control Interface (TCI) with the following components:

- Agent State:** Mount (Okay button)
- Axes Command:**
 - Agent Enable:**
 - Roll:** Standby, Homing, Pos/Vel, 0.0 deg, Slew, Halt, Home, Park, Unwrap, Stop, Stop Reset, Enable, Disable, Goto Pos L1, Goto Neg L1, Recover L2, Fault Reset.
 - Pitch:** Standby, Homing, Pos/Vel, 0.0 deg, Slew, Halt, Home, Park, Unwrap, Stop, Stop Reset, Enable, Disable, Goto Pos L1, Goto Neg L1, Recover L2, Fault Reset.
 - Rotator:** OFF, UNKNOWN, Pos/Vel, 0.0 deg, Slew, Halt, Home, Park, Unwrap, Stop, Stop Reset, Enable, Disable, Goto Pos L1, Goto Neg L1, Recover L2, Fault Reset.
 - Global Controls:** Slew, Halt, Park, Home, Stop.


1.

3. Once homed successfully the state field will briefly go to "stopped" and then finally "L1 Positive Limit" in both axes:

The screenshot shows the 'Axes' tab of a telescope control interface. At the top, there are tabs for 'State', 'Observation Script', 'Sequencer', 'Source', 'Tracking', 'Axes' (selected), 'Guide', and 'Instrument'. Below these is the 'Agent State' section, which shows 'Mount' with a green 'Okay' status. The main section is 'Axes Command', which is split into 'Agent Enable' and 'Agent Disable' tabs. The 'Agent Enable' tab is active and contains three columns: 'Roll', 'Pitch', and 'Rotator'. Each column has a status indicator (e.g., 'Okay' for Roll and Pitch, 'Off' for Rotator), a position/velocity selector (Pos/Vel), a numerical input field (0.0), a unit (deg), and a list of control buttons (Slew, Halt, Home, Park, Unwrap, Stop, Stop Reset, Enable, Disable, Goto Pos L1, Goto Neg L1, Recover L2, Fault Reset). The 'Rotator' column also has a 'UNKNOWN' status indicator. Below these columns are additional buttons for Slew, Halt, Park, Home, and Stop.

1.

4. Now go to the *Source* tab and move the telescope out of the limits to a valid sky position. If the telescope is not going to be used immediately typically the telescope is sent to the park position. Remember to stop the tracking loop if observing is not going to start. The zenith position is inputted in the picture below.

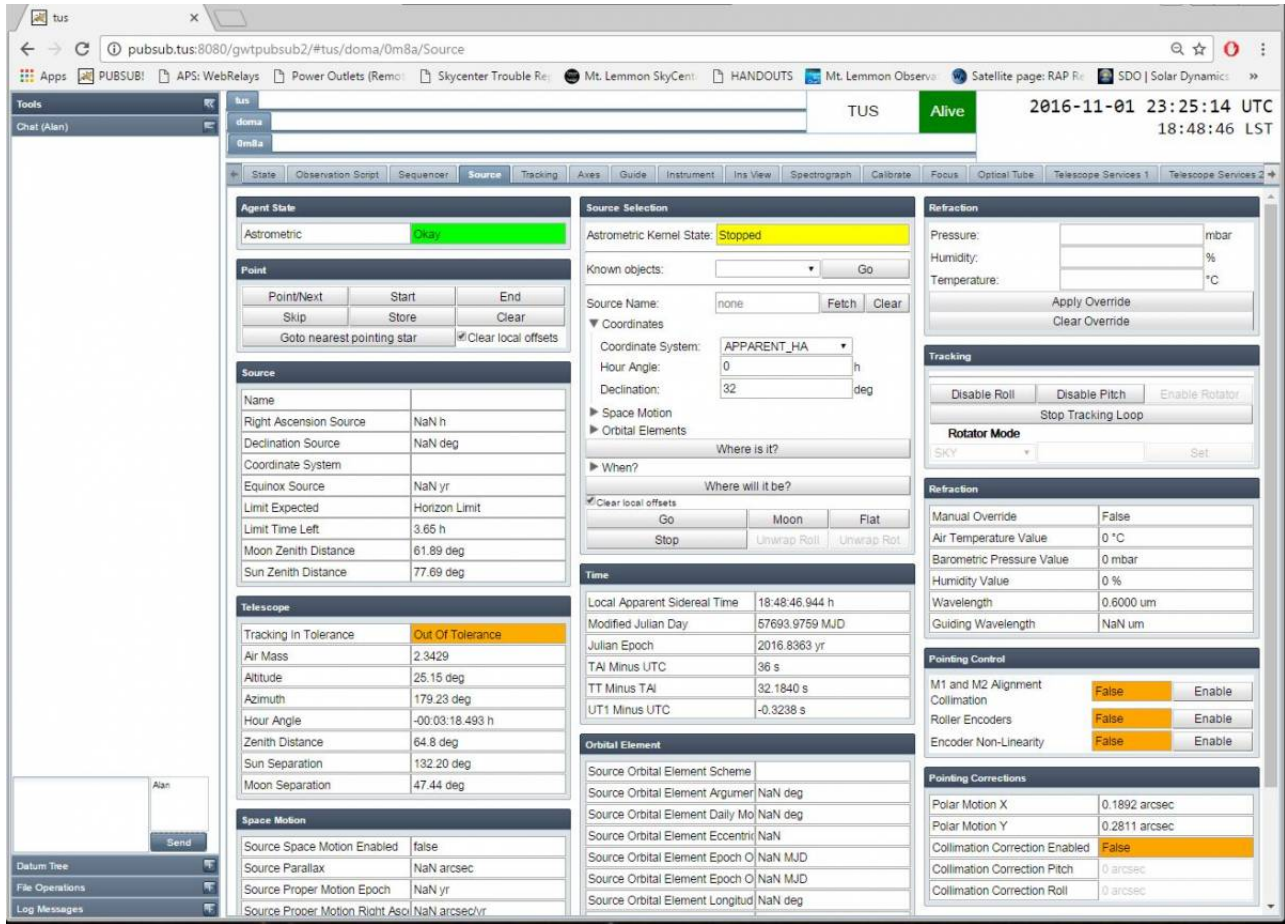

- 5.
6. Please see the Using the [LCOGT GUI](#) and [Moving the Telescope](#) section for more information.

From:
<https://lavinia.as.arizona.edu/~tscopewiki/> - MOON

Permanent link:
https://lavinia.as.arizona.edu/~tscopewiki/doku.php?id=public:catalinas:lemmon:schulman_32:startup_procedure&rev=1659643940

Last update: 2022/08/04 13:12

