

Remote operation of LN2 dewar's valve

P. Gabor

Dec 2, 2019

- Make sure the Axis 214PTZ camera has a good view.
- View and control the camera use a browser or an app (e.g., the IP Cam Viewer Lite app on the Samsung Galaxy Tablet A). The camera's IP is 10.0.2.27; username and password is the usual combination for VATT observers.
- Plug the remote valve's power supply into the power grid.
- Install the Jinvo Smart app (available on the Samsung Galaxy Tablet A). Login as pgabor@as.arizona.edu with password GeorgeCoyne9.

From:

<https://lavinia.as.arizona.edu/~tscopewiki/> - **MOON**

Permanent link:

https://lavinia.as.arizona.edu/~tscopewiki/doku.php?id=vatt:jinvoo_ln2_valve&rev=1575435231

Last update: **2019/12/03 21:53**

