



THE INDOOR TEMPERATURE/HUMIDITY SENSOR IS LOCATED IN THE DOME ABOVE THE SOUTH CONTROL ROOM DOOR

OUTDOOR TEMPERATURE/HUMIDITY SENSOR IS LOCATED ON THE BOK WALK INSIDE A METAL BOX BEHIND THE DOOR

THE OUTDOOR SENSOR IS LOCATED WHERE THE DAYTIME SUN STRIKES IT AND ARTIFICIALLY RAISES THE TEMPERATURE READING DURING MID-DAY

Title		
INDOOR-OUTDOOR TEMPERATURE / HUMIDITY SENSORS		
Size	Document Number	Rev
A	<Doc>	A
Date:	Friday, June 19, 2020	Sheet 1 of 1